






Reset




Useless TRRS

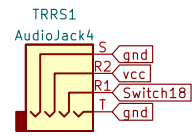


Left Side (Main)

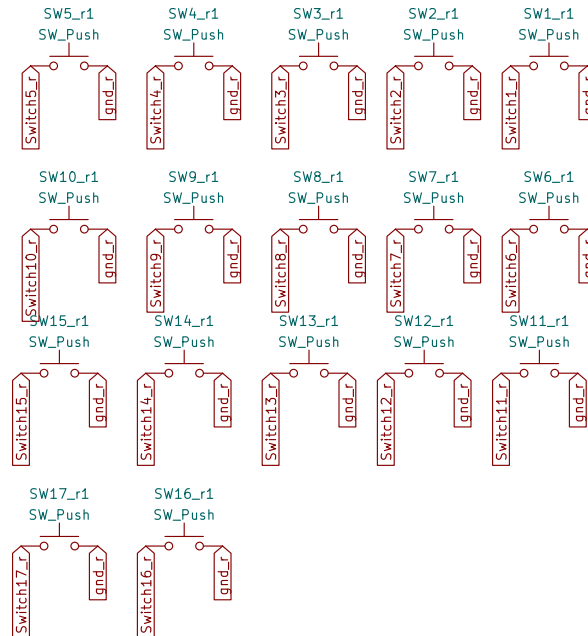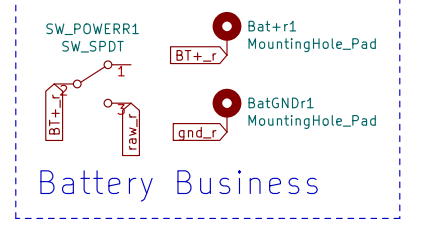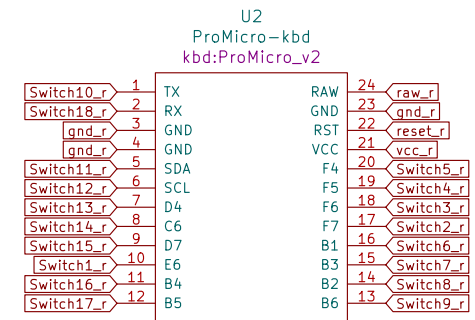

Reset



Useless TRRS

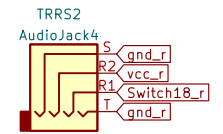

Right Side (Peripheral)

broomlabs

Sheet: /
File: sweepbling-lp_pcb.kicad_sch

Title: Sweep V2

Size: A3 Date: 2021-03-10
KiCad E.D.A. eeschema (6.0.5)

Rev: 0.1
Id: 1/1